

Grip Clips

simple, versatile, reusable





Vinyl, fabrics, display films and paper can be fixed with a flick of the wrist using Grip Clips.

Mounting the eyelets is easy: Place the banner material between the upper and lower part of the eyelet and lock the clip.

Two different models are available:

Grip Clip Mini with a loading capacity of up to 45 kg

Grip Clip Midi: with a loading capacity of up to 100kg.

Perforating the banner material to install the clips is not necessary.

After utilisation, the clips can be removed without causing damage to the material and used again. Instead of pulling off when the load increases, they actually grip harder – the heavier the load, the tighter they grip.

Advantages

- · Numerous capabilities
- · Can be removed without residues, relocatable and reusable
- · Withstands even high tensile strengths
- · Fast mounting without tools
- · Applicable to various materials (PVC, fabric, paper, display film...)
- · 2 types available, offered in a wide range of colours:

Grip Clip Mini: Load capacity up to 45 kg Grip Clip Midi: Load capacity up to 100 kg

	Grip Clip Mini	Grip Clip Midi
Dimensions (L x W x H)	· 40 x 35 x 10 mm · Diameter eyelet hole Ø 9 mm	· 70 x 40 x 18.5 mm · Diameter eyelet hole Ø 10 mm
Material	· glass-fibre reinforced Nylon	· glass-fibre reinforced Nylon
Colours	· black, white, blue, green, red, yellow, clear	· black, white, blue
		Car Car Car
Recommended number of eyelets needed	Grip Clip every 50cm, Grip Clip in each corner	Grip Clip every 50 cm, Grip Clip in each corner
Load capacity	up to 45kg (depending on the material used)	up to 100 kg (depending on the material used)
Max. material thickness	1.5 mm	5 mm
Applications	Large-format banners Banners Indoor Banners	Large-format bannersBannersIndoor Banners
Options	· set of 4 clips · individually	· set of 4 clips · individually
Fixation	 Open the Grip Clip by pulling apart the upper and lower part Slide the print between upper and lower part to the bridge Push the lower part into the upper part until the print is fixed 	 Open the Grip Clip by pressing down the notched bar Slide the print between upper and lower part to the bridge Push the lower part with the notched bar into the upper part till the print is fixed
As we are constantly		4

As we are constantly developing our products we reserve the right of changing technical issues and dimensional deviations.











