


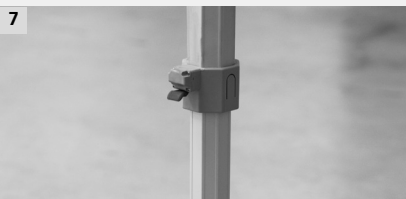

## Faltpavillon / Faltzelt Select 4 x 4 m · 4 x 6 m · 4 x 8 m

**AUFBAU**  
(mit mind. 2 Personen empfohlen)

- 1 Gestell entpacken und aufrichten
- 2 Aluminiumgestell gleichmäßig auseinanderziehen
- 3 Zeltdach über Gestell legen (Ecken des Daches auf Ecken des Gestells)
- 4 Dach fixieren: Flauschband an Zeltdach-ecken am Klettband des Gestells befestigen
- 5 Gestell auseinanderziehen, Einrasten ist hörbar
- 6 **Achtung:** Vergewissern Sie sich, dass die Sicherungsbolzen wirklich eingerastet sind, schieben Sie ggf. das Gestell leicht nach oben, bis die Ecke einrastet.
- 7 Standbeine ausziehen und einrasten (Rastenstellung 2 verwenden)
- 8 Nachspannen des Zeltdaches mit Kurbel in der Mitte des Gestells
- 9 Faltpavillon Select ist nun aufgebaut und einsatzbereit.



### MONTAGE DER SEITENWÄNDE

- 10 Die Standbeine auf Durchgangshöhe von 2,20 m ausziehen (Rastenstellung 2)
- 11 Befestigung Seitenwände mittels Klettbandes an der Unterkante des Zeltdaches
- 12 Klettschlaufen um die Standbeine legen, Seitenwände mit Reißverschluss über Außenseiten der Standbeine miteinander verbinden
- 13 **Achtung:** Beim Einsatz im Außenbereich müssen Faltzelte und Faltpavillons immer sicher am Boden verankert werden. Nutzen Sie zur Abspannung des Daches zwingend die zusätzlich lieferbaren Abspann-Sets sowie die stapelbaren Beschwerungsplatten, -gewichte und Erdhaken zur Stabilisierung der Zeltpfosten. Für den Langzeiteinsatz und den langzeitigen unbeaufsichtigten Einsatz im Außenbereich sind Faltzelte und Faltpavillons nicht geeignet.

### ABBAU

- 14 ggf. Zeltwände abnehmen (in optionaler Transporttasche verstauen), rote Verstellhebel drücken, Standfüße nach unten einschieben
- 15 rote Sicherungsbolzen am Dachgestell betätigen, schnappt leicht nach unten (Pfosten nicht direkt darunter berühren)
- 16 Dachbespannung abnehmen, in optionaler Transporttasche verstauen
- 17 Gestell zusammenschieben, in optionaler Trolleytasche verstauen

**Hinweis:** Das Zeltgestell muss sich leicht und ohne Kraftaufwendung entfalten lassen. Druckteile ohne Laminierung müssen besonders sorgfältig behandelt werden, um Kratzspuren zu vermeiden. Schleifen Sie die Druckteile niemals am Boden.

Die Lagerung darf nur im trockenen Zustand erfolgen. Faltpavillons und Faltzelte Select sollten aufrecht stehend gelagert werden. Um Beschädigungen am Produkt zu vermeiden, muss das Zeltgestell mit den Füßen nach unten in die Trolleytasche Basic gestellt und anschließend sorgfältig mit den Gurten verspannt werden. Für den Transport und die Lagerung von Faltzelten Select müssen die Zeltdächer und Zeltwände vom Gestell abgenommen werden.

Die Trolleytasche Basic ist für die Lagerung sowie den gelegentlichen, kurzen Transport von Faltzelten auf glatten Böden geeignet.

## Gazebo / Pop Up Tent Select 4 x 4 m · 4 x 6 m · 4 x 8 m

**ASSEMBLY INSTRUCTIONS**  
(recommended with min. 2 persons)

- 1 Unpack the frame and place it upright
- 2 Extend the aluminium frame slightly
- 3 Put the tent roof over the frame, the corners of the roof must be parallel to the edges of the frame
- 4 To fix the roof, attach loop tape (in the corners of the tent roof) to the Velcro of the frame
- 5 Pull apart the frame until the rods click into place (you may need to lift up the frame slightly)
- 6 **Note:** Make sure that the safety pins have locked. If necessary, lift up the frame a little until the corners snap.
- 7 Pull out the legs until they are also locked into place (lock position 2)
- 8 Stretch the tent roof using the crank in the middle of the frame
- 9 The Gazebo Select is ready for use.

### ASSEMBLY OF SIDE WALLS

- 10 Please pull out the legs for an overhead clearance of 2.20m (lock position 2)
- 11 Attach the side walls with the Velcro to the bottom edge of the roof (starting in the corner)
- 12 Put the Velcro straps around the legs, when ordering side walls with zipper, join them over the outside of the legs
- 13 **Attention:** For every outdoor application, folding tents and folding pavilions must always be anchored to the ground. For roof anchoring and stretching it is absolutely essential to use optionally available guy sets as well as stackable weighting plates, weights and ground hooks to stabilize the tent posts. Pop Up Tents and Gazebos are not suitable for long-term and unattended outdoor use.

### DISMOUNTING

- 14 If existing, remove tent walls (store in optionally available transport bag), push the red adjustment lever and slide in the legs
- 15 Press the red safety pins in the edges of the roof (Please note: the frame skips downward quite easily, please be careful when handling the poles to avoid injuries)
- 16 Remove the roof covering, store in the optionally available transport bag
- 17 Push together the rack, store in optionally available trolley bag

**Warning:** To avoid mechanical damage, do not use force during assembly. Please note that prints without additional coating may be susceptible to scratching when not properly cared for. Prints should never be dragged along the ground.

Prints must be completely dried before storing away. Gazebo Select and Pop Up Tent Select should always stand upright when stored. To prevent any damage to the product, the tent frame must be placed with the feet in the trolley pocket and then carefully tensioned with straps. For transport and storage of folding tents, the tent roofs must always be removed from the frame.

The Trolley Bag Basic is suitable for storage of Pop Up tents and their brief transport on smooth surfaces.