




# Bowflag® Premium - Dart

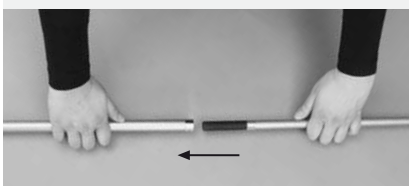

Einlagig / Single-sided

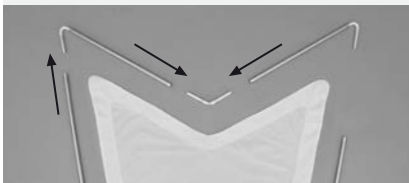

Doppellagig / Double-sided

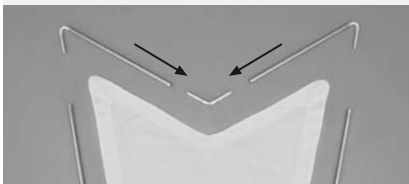

## Aufbauanleitung

Entnehmen Sie alle Einzelteile der Verpackung und prüfen Sie die Vollständigkeit.

Größe	L	M, S
Stangensegmente	6	4
Stangensegmente mit Eckverbinder	2	2
Winkelverbinder	1	1
Y-Element	1	1

Im Lieferumfang sollten jeweils 2 Stangensegmente gleichen Durchmessers enthalten sein (für rechten und linken Hohlraum).

Die Stangensegmente für jede Seite des Hohlraumes zusammenstecken, beginnend mit dem größten Stangendurchmesser.

**Einlagig:** Den Winkelverbinder und die Stangensegmente mit dem Eckverbinder V-förmig zusammenstecken und mit den Stangensegmenten für eine Seite des Hohlraums verbinden.

Die Bespannung mit dem Hohlraum auf die Segmente aufschieben (beginnend am noch unverbundenen Ende des Stangensegments mit Eckverbinder).

Die restlichen Stangensegmente in die 2. Seite des Hohlraums führen und mit dem Stangensegment mit Eckverbinder verbinden.

**Doppellagig:** Den Winkelverbinder und die Stangensegmente mit dem Eckverbinder V-förmig zusammenstecken und durch die Öffnung in den Hohlraum schieben, anschließend die Öffnung mit dem Klettverschluss schließen.

Die restlichen Stangensegmente am unteren Ende der Bespannung jeweils durch die rechte und linke Seite des Hohlraums führen und mit den Eckverbindern verbinden.

Jeweils unteres Ende mit dem Y-Element verbinden.

Kompletieren Sie das Bowflag® mit einer der gelieferten Bodenhalterungen.

**Bitte beachten:** Bei Verwendung des Erdspießes schlagen Sie bei der Montage niemals auf den Rotator sondern ausschließlich auf den Spieß. Reklamationen, die auf unsachgemäßen Gebrauch zurückzuführen sind, können nicht anerkannt werden.

### Pflege- und Reinigungshinweise

Bowflag®-Bespannungen aus Markenpolyester können in jeder Haushaltswaschmaschine unter Verwendung eines Markenwaschmittels bei 60°C gewaschen werden. Vor dem Waschen empfiehlt es sich, alle harten Teile, die Beschädigungen des Flaggenmaterials verursachen können, zu entfernen.

Zum Trocknen werden die Bowflag®-Bespannungen tropfnass aufgehängt oder an der Stange befestigt.

Von einer chemischen Reinigung sollte grundsätzlich abgesehen werden, da sonst keine Garantie für die Farbechtheit gegeben werden kann.

## Assembly Instructions

Examine the scope of delivery to make sure all pieces are included and are not damaged.

Size	L	M, S
Pole segments	6	4
Pole segments with angle bracket	2	2
Angle joint	1	1
Y-Connector	1	1

The scope of delivery should contain each 2 pole segments with the same diameter (for left and right sleeve).

Connect the pole segments for both sides' sleeves, ordered by pole diameter. Start with the largest diameter.

**Single-sided:** Join the angle joint V-shaped to the pole segments with angle bracket and connect them with the pole segments of one vertical side.

Slide the connected segments through the sleeve on one side. Start at the free end of the pole segment with angle bracket. Slide the remaining pole segments through the other side of the sleeve and connect them to the free angle bracket in the sleeve.

**Double-sided:** Join the angle joint V-shaped to the pole segments with angle bracket and slide them through the opening of the sleeve. Close the opening of the sleeve afterwards using the hook-and-loop tape. Slide the remaining pole segments through the left and right sleeve at the lower end of the flag and connect them to the angle brackets.

Connect the lower end of both poles to the Y-Connector.

Complete the Bowflag® with the supplied base.

**Please note:** Do not hammer on the top of the swivel! This will damage the bearing. Instead, hammer on the top of the spike that goes into the ground. If this is not done correctly, failure of ground spike will result and all warranties will be void.

### Washing, drying, ironing

Our flags are made from branded polyester and can be washed in all household washing machines at 140°F (60°C) with the addition of washing detergent.

Before washing it is advisable to remove all items that could cause damage. After washing, the flag should be rinsed thoroughly. For drying, the washed sails are best hung wet or hoisted on the pole. The ironing and steaming of the flag for outdoor use is not necessary.

Do not dry clean your Bowflag®.