Faltpavillon Select Hexagon
Faltzelt Select Hexagon

AUFBAU (mind. 2 Personen)

1 Gestell entpacken und aufrichten
2 Aluminiumgestell gleichmäßig auseinanderziehen
3 Zeltdach über Gestell legen (Ecken des Daches auf Ecken des Gestells)
4 Dach fixieren: Flauschband an Zeltdachecken am Klettband des Gestells befestigen
5 Gestell auseinanderziehen, einrasten lassen
6 **Achtung:** Vergewissern Sie sich, dass die Sicherungsbolzen wirklich eingerastet sind, ggf. das Gestell leicht nach oben schieben.
7 Standbeine (in gewünschte Höhe) ausziehen und einrasten
8 Nachspannen des Zeltdaches mit Kurbel in der Mitte des Gestells
9 **Faltpavillon Select Hexagon ist nun aufgebaut einsatzbereit.**

MONTAGE DER SEITENWÄNDE

10 **Faltzelt Select Hexagon Ø 3 m:**
Standfüße auf Durchgangshöhe von 2,05 m ausziehen (Rastenstellung 4)
Faltzelt Select Hexagon Ø 4 m:
Standfüße auf Durchgangshöhe von 2,35 m ausziehen (Rastenstellung 1)
11 Befestigung Seitenwände mittels Klettbandes an der Unterkante des Zeltdaches

12 Klettschlaufen um Standbeine legen, fixieren
13 **Achtung: Beim Einsatz im Außenbereich müssen Faltzelte und Faltpavillons immer sicher am Boden verankert werden. Nutzen Sie zur Abspannung des Daches zwingend die zusätzlich lieferbaren Abspann-Sets sowie die stapelbaren Beschwerungsplatten, -gewichte und Erdhaken zur Stabilisierung der Zeltpfosten.**

ABBAU

14 ggf. Zeltwände abnehmen (in optionaler Transporttasche verstauen), rote Verstellhebel drücken, Standfüße nach unten einschieben
15 rote Sicherungsbolzen am Dachgestell betätigen, schnappt leicht nach unten (Pfosten nicht direkt darunter berühren)
16 Dachbespannung abnehmen, in optionaler Transporttasche verstauen
17 Gestell zusammenschieben, in optionaler Trolleytasche verstauen

Hinweis: Das Faltgestell muss sich leicht und ohne Kraftaufwand entfalten lassen. Um Schäden zu vermeiden, wenden Sie keine Gewalt an! Druckteile ohne Laminierung müssen besonders sorgfältig behandelt werden, um Kratzspuren zu vermeiden. Schleifen Sie die Druckteile niemals am Boden.
Die Lagerung darf nur im trockenen Zustand erfolgen. Das Faltzelt Select Hexagon muss aufrecht stehend gelagert werden. Um Beschädigungen am Produkt zu vermeiden, muss das Zeltgestell mit den Füßen nach unten in die Trolleytasche Basic gestellt und anschließend sorgfältig mit den Gurten verspannt werden. Für den Transport und die Lagerung von Faltzelten Select Hexagon müssen die Zeltdächer und Zeltwände vom Gestell abgenommen werden.
Die Trolleytasche Basic ist für die Lagerung sowie den gelegentlichen, kurzen Transport von Faltzelten auf glatten Böden geeignet.

Gazebo Select Hexagon
Pop Up Tent Select Hexagon

ASSEMBLY INSTRUCTIONS (at least 2 persons)

1 Unpack the frame and place it upright
2 Extend the aluminium frame slightly
3 Put the tent roof over the frame, the corners of the roof must be parallel to the edges of the frame
4 To fix the roof, attach loop tape to the Velcro of the frame
5 Pull apart the frame until the rods click into place (you may need to lift up the frame slightly)
6 **Note:** Make sure that the safety pins have locked. If necessary, lift up the frame a little.
7 Pull out the legs as high as desired until they are also locked into place
8 Stretch the tent roof using the crank in the middle of the frame
9 **The Gazebo Select Hexagon is ready for use.**

ASSEMBLY OF SIDE WALLS

10 **Pop Up Tent Select Hexagon Ø 3 m:**
Pull out the legs for an overhead clearance of 2.05 m (lock position 4)
Pop Up Tent Select Hexagon Ø 4 m:
Pull out the legs for an overhead clearance of 2.35 m (lock position 1)
11 Attach the side walls with the Velcro to the bottom edge of the roof (starting in the corner)
12 Put the Velcro straps around the legs to attach
13 **Attention: For every outdoor application, folding tents and folding pavilions must always be anchored to the ground. For roof anchoring and stretching it is absolutely essential to use optionally available guy sets as well as stackable weighting plates, weights and ground hooks to stabilize the tent posts.**

DISMOUNTING

14 If existing, remove tent walls (store in optionally available transport bag), push the red adjustment lever and slide in the legs
15 Press the red safety pins in the edges of the roof (Please note: the frame skips downward quite easily, please be careful when handling the poles to avoid injuries)
16 Remove the roof covering, store in the optionally available transport bag
17 Push together the rack, store in optionally available trolley bag

Warning: The rack needs to be unfolded easy an without any force. To avoid damages, do not use excessive force. Please note that prints without additional coating may be susceptible to scratching when not properly cared for. Prints should never be dragged along the ground.
Prints must be completely dried and removed from frame before storing away. During transportation and storage the Pop Up Tent Select Hexagon should always stand upright. To prevent any damage to the product, the tent frame must be placed with the feet in the trolley pocket and then carefully tensioned with straps. For transport and storage of folding tents, the tent roofs must always be removed from the frame.
The Trolley Bag Basic is suitable for storage of Pop Up tents and their brief transport on smooth surfaces.

4

6

7
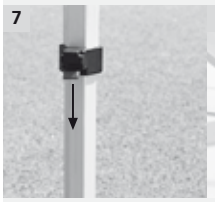

8

11

12

13