
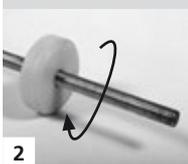


## Aufbauanleitung Café Banner

## Assembly Instruction Café Banner

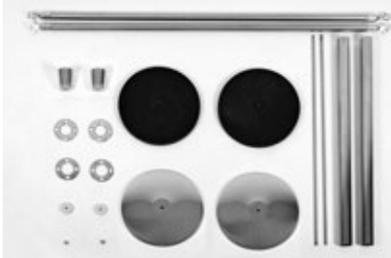

### Lieferumfang

- Fuß
- Fußabdeckung
- 2 Ringlochplatten:  
(1) oben: Innendurchmesser 4,65 cm  
(mit Innenringnut)  
(2) unten: Innendurchmesser 5,12 cm
- Pfostenrohr
- Kopf
- Gewindestange
- Kunststoff-Zentrierring
- Mutter
- Querstangen mit Haken

### Aufbau Pfosten

- 1 Abdeckung auf den Fuß setzen
- 2 Zentrierring im Uhrzeigersinn auf Gewindestange schrauben (ca.10-20 cm)
- 3 Gewindestange mit Zentrierring im Uhrzeigersinn auf den Fuß schrauben, bis diese auf der Unterseite ca. 2 cm austritt  
**(Achtung: Zentrierring sollte sich am unteren Ende der Gewindestange befinden)**
- 4 Pfostenrohr senkrecht über die Gewindestange auf den Fuß setzen
- 5 Ringlochplatten über das Pfostenrohr schieben - (2) komplett über Pfosten nach unten ziehen; (1) auf das obere Ende des Pfostens aufsetzen
- 6 Kopf auf Gewindestange aufschrauben, bis dieser fixiert ist
- 7 Gewindestange an der Unterseite der Fußplatte mit der Mutter fixieren  
weitere Pfosten analog montieren

### Montage Werbedruck

- 8 Querstangen durch die Hohläume des Werbedruckes führen
- 9 Querstangen an den Ringplatten der Pfosten einhängen  
**Achtung:** Richtung der Haken beachten (obere Querstange Haken nach unten einhängen; untere Querstange Haken nach oben einhängen)!

### Scope of delivery

- Base
- Base cover
- 2 Post rings:  
(1) inner diameter on top 4,65 cm  
(with inner ring groove)  
(2) inner diameter on bottom 5,12 cm
- Post tube
- Head
- Thread rod
- Plastic centering ring
- Screw nut
- Cross bars with hooks

### Assembly posts

- 1 Put the base cover onto the base
- 2 Screw the centering ring on the thread rod in clockwise direction (approx.10-20 cm)
- 3 Screw the thread rod with the centering ring in clockwise direction, until it can be seen approx. 2 cm out of the bottom side  
**(Attention: centering ring should be on the lower side of the thread rod)**
- 4 Place the post tube vertically over the thread rod on the base
- 5 Push the post rings on the post tube - (2) pull them down completely; (1) attach them at the head of the post
- 6 Lock head on the thread rod by screwing
- 7 Fix the thread rod on the bottom of the base plate using the screw nut  
repeat operations to mount further posts

### Fixation advertising print

- 8 Slide the cross bars through the sleeves of the advertising print
- 9 Attach the cross bars to the post rings  
**Attention:** Please consider direction of the hooks (upper cross bar hooks down; lower cross bar hooks face upwards)!